

M O O N  
by SIMAUDIO

The performance of a lifetime



Owner's Manual  
**MOON 340i**  
Integrated Amplifier

## **ATTENTION**

Do not ingest the battery, Chemical Burn Hazard.

The remote control supplied with this product contains a coin/button cell battery.

If the coin/button cell battery is swallowed,  
it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely,  
stop using the remote control and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body,  
seek immediate medical attention.

To prevent the risk of equipment damage or personal harm,  
use only Class 2 rated loudspeaker wire properly terminated  
and connected securely to the binding posts.


**simaudio.com**

Simaudio Ltd  
1345 Newton Road, Boucherville, Québec J4B 5H2 CANADA



Date Code: 20190715

<b>IMPORTANT SAFETY INSTRUCTIONS</b>	<b>02</b>
<b>INTRODUCTION</b>	<b>04</b>
<b>UNPACKING</b>	<b>06</b>
<b>INSTALLATION &amp; PLACEMENT</b>	<b>08</b>
<b>FRONT PANEL CONTROLS</b>	<b>08</b>
<b>OPTIONAL DIGITAL INPUTS</b>	<b>09</b>
<b>OPTIONAL PHONO SECTION</b>	<b>10</b>
<b>BALANCED INPUTS</b>	<b>11</b>
<b>REAR PANEL CONNECTIONS</b>	<b>12</b>
<b>SIMLINK™</b>	<b>13</b>
<b>OPERATING THE MOON 340I</b>	<b>13</b>
<b>REMOTE CONTROL OPERATION</b>	<b>13</b>
<b>SPECIFICATIONS</b>	<b>13</b>

### Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or another apparatus that produces heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for safety. If the provided plug does not fit into the outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Unplug mains cord during transportation.
11. Only use attachments and accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used,  use caution when moving the cart/apparatus combination to avoid injury from tip over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power cord or plug has been damaged; liquid has been spilled or objects have fallen into the apparatus; or the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. No naked flame sources, such as candles, should be placed on the apparatus.

**WARNING:**  
TO REDUCE THE RISK OF FIRE OR  
ELECTRIC SHOCK, DWO NOT EXPOSE  
THIS APPLIANCE TO RAIN OR MOISTURE.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
<b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



The lightning flash with the arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance



Marking by the "CE" symbol (shown left) indicates compliance of this device with the EMC (Electromagnetic Compatibility) and LVD (Low Voltage Directive) standards of the European Community

 
PLEASE READ ALL INSTRUCTIONS AND PRECAUTIONS CAREFULLY  
AND COMPLETELY BEFORE OPERATING YOUR UNIT

1. ALWAYS disconnect your entire system from the AC mains before connecting or disconnecting any cables, or when cleaning any component. To completely disconnect this apparatus from the AC mains, disconnect the power supply cord plug from the AC receptacle.
2. The unit must be terminated with a three-conductor AC mains power cord which includes an earth ground connection. To prevent shock hazard, all three connections must ALWAYS be used. Connect the unit only to an AC source of the proper voltage; Both the shipping box and rear panel serial number label will indicate the correct voltage. Use of any other voltage will likely damage the unit and void the warranty
3. AC extension cords are NOT recommended for use with this product. The mains plug of the power supply cord shall remain readily accessible.
4. NEVER use flammable or combustible chemicals for cleaning audio components.
5. NEVER operate the unit with any covers removed. There are no user-serviceable parts inside. An open unit, especially if it is still connected to an AC source, presents a potentially lethal shock hazard. Refer all questions to authorized service personnel only.
6. NEVER wet the inside of the unit with any liquid. If a liquid substance does enter your unit, immediately disconnect it from the AC mains and take it to your MOON dealer for a complete check-up.
7. NEVER spill or pour liquids directly onto the unit.
8. NEVER block air flow through ventilation slots or heatsinks.
9. NEVER bypass any fuse.
10. NEVER replace any fuse with a value or type other than those specified
11. NEVER attempt to repair the unit. If a problem occurs contact your MOON dealer.
12. NEVER expose the unit to extremely high or low temperatures.
13. NEVER operate the unit in an explosive atmosphere.
14. ALWAYS keep electrical equipment out of reach of children.
15. ALWAYS unplug sensitive electronic equipment during lightning storms.
16. WARNING: Do not expose batteries or battery pack to excessive heat such as sunshine, or fire or the like.

MOON by Simaudio

## Introduction

Thank you for selecting the **MOON 340i** Integrated Amplifier as a part of your hi-fi reproduction system. This Integrated amplifier has been designed to offer state-of-the-art high-end performance in an elegant package, while retaining all the sonic hallmarks on which Simaudio has made its reputation. We have spared no effort to ensure that it is among the finest integrated amplifiers available. We have been building high-performance audio equipment for over 35 years, and the know how gained through our cumulative experience is an important reason why Simaudio Integrated amplifiers are so musically satisfying.

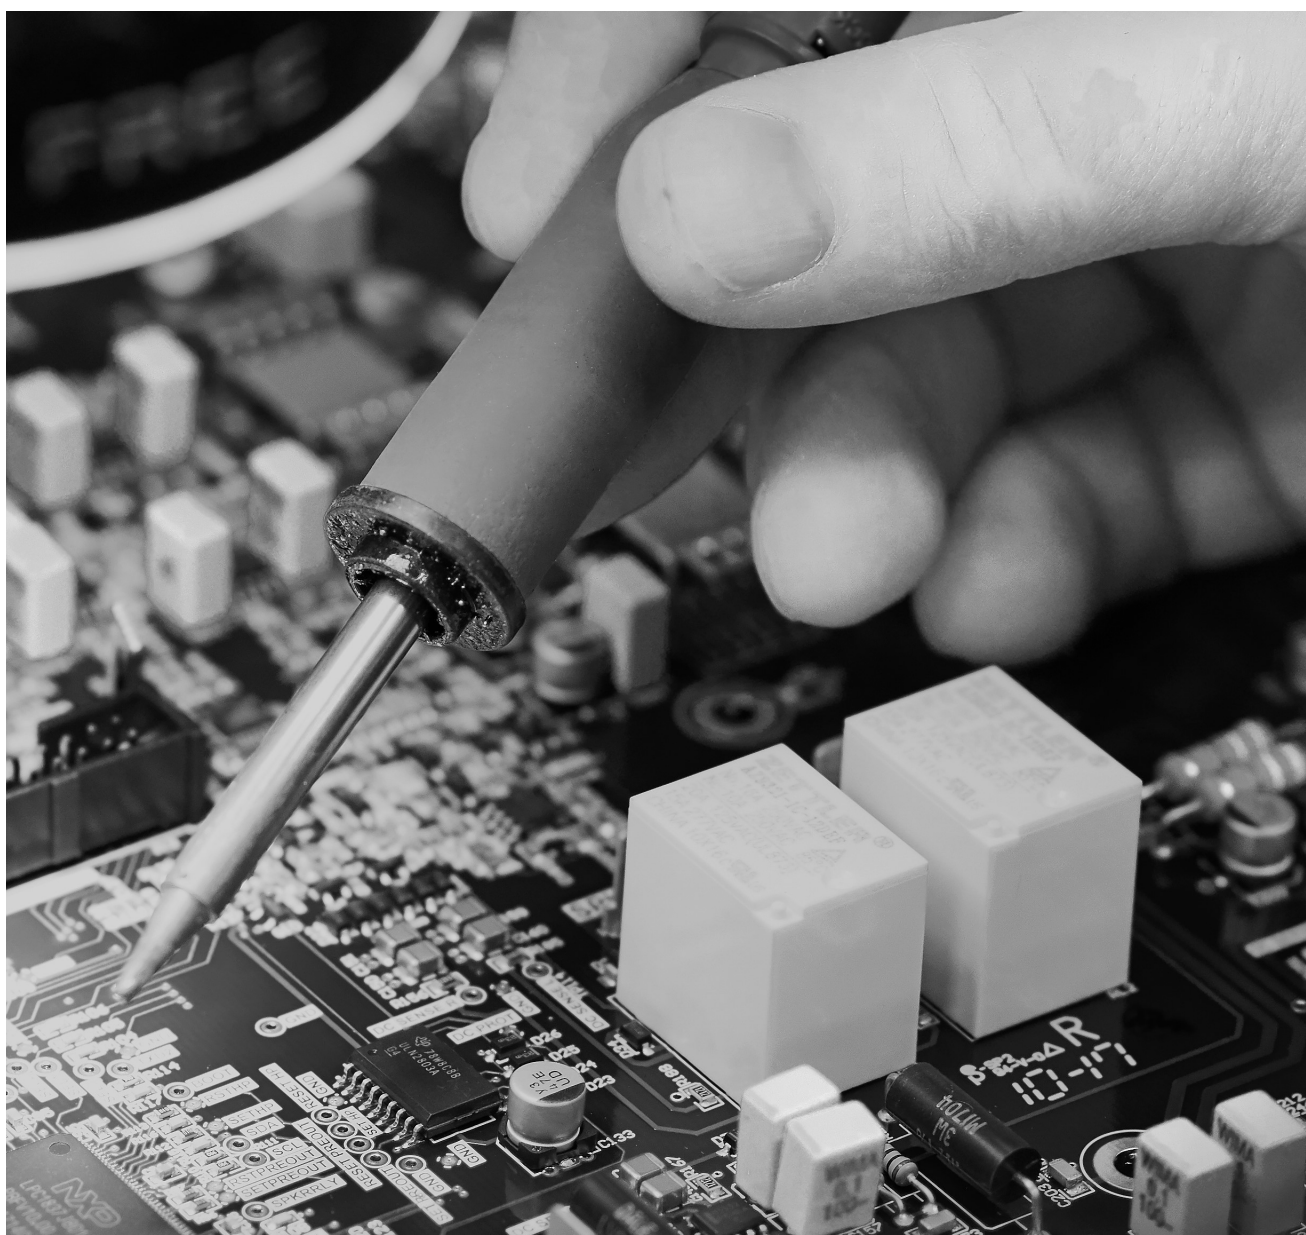

The performance of your **340i** will continue to improve during the first 300 hours of listening. This is the result of a “break-in” period required for the numerous high quality electronic parts used throughout this amplifier.

Before setting up your new **MOON 340i**, we encourage you to please read this manual thoroughly to properly acquaint yourself with its features. We hope you enjoy listening to the **MOON 340i** Integrated Amplifier as much as the pride we have taken in creating this fine audio product. We understand the power and emotion of music and build our products with the goal of faithfully capturing these elusive qualities.

The information contained in this manual is subject to change without notice. The most current version of this manual is available on our official website at <http://www.simaudio.com>

Your **MOON 340i** Integrated Amplifier incorporates many significant design features to achieve its “world-class” level of performance. This is an abbreviated list of the more important features:

**Six line-level inputs** including one front-mounted 1/8” mini-jack for personal media players.

One single-ended audio input which functions as a “**pass-through**”, bypassing the gain stage to accommodate a component such as a home-theater processor, whose own volume control is used instead.

Optional internal **digital-to-analog converter** circuit for use with a PC, digital music server or external transport, etc.

Optional internal **phono preamp** is available with adjustments for gain level as well as capacitance and resistance loading.

Line-level **balanced XLR input**.

**Headphone output** on ¼” TRS jack located on the front panel.

**Proprietary MOON Bipolar Output transistors** with unprecedented gain linearity resulting in improved bass response and even more accurate sonic reproduction.

**Class A output** to 5 watts for greater efficiency.

**IR input** for external control.

**SimLink™** controller port allows for 2-way communications between other compatible MOON components.

**RS-232 port** for i) full unsolicited bidirectional feedback in custom installation setups and ii) firmware updates.

**12 Volt Trigger** output.

**Rigid chassis construction** to minimize the effects of external vibrations.

Designed to be **powered up at all times** for optimal performance.

**Low operating temperature** for an ultra-long life expectancy.

## Unpacking

The **MOON 340i** integrated amplifier should be removed from its box with care. The following accessories should be included inside the box with your integrated amplifier :

- AC power cable
- "CRM-3" remote control with two "CR-2032" batteries
- "SimLink™" cable with 1/8" mini plug terminations on each end
- This owner's manual
- Warranty and product registration information (USA and Canada only)

Once the **MOON 340i** is unpacked, inspect it thoroughly and report any damage to your dealer immediately. We suggest that you keep all of the original packaging, storing it in a safe, dry place in case you're required to transport this product. The customized packaging is specially designed to protect the **340i** from any potential damage during transit.

Please write the serial number of your new **MOON 340i** in the space provided below for future reference.

**Serial Number**

## Installation & Placement

The **MOON 340i** Integrated Amplifier is both powerful and heavy. It requires reasonable ventilation to maintain an optimum and consistent operating temperature, especially since it will radiate heat when driven hard. Consequently, it should be placed in a location with empty space around it for proper heat dissipation. You should never place another component on top of this integrated amplifier. As well, it should be placed on a solid level surface. You should avoid placing it near a heat source or inside a closed cabinet that is not well ventilated as this could compromise the amplifier's performance and reliability. The **340i** uses a large toroidal transformer in its power supply;

even though it is well shielded, you should not place this integrated amplifier too close to source components sensitive to EMI, such as turntables, phono preamplifiers and CD Players. Finally, you should never place another component directly on top of this integrated amplifier.


***If you intend to use the MOON 340i's USB input connection (PCM or DSD) with a Windows-based computer, you will need to install our USB HD DSD driver, which can be downloaded from the support section of our website.***

***Note: Apple-based computers don't require this driver.***



## Front Panel Controls

 Figure 1 : MOON 340i Front panel

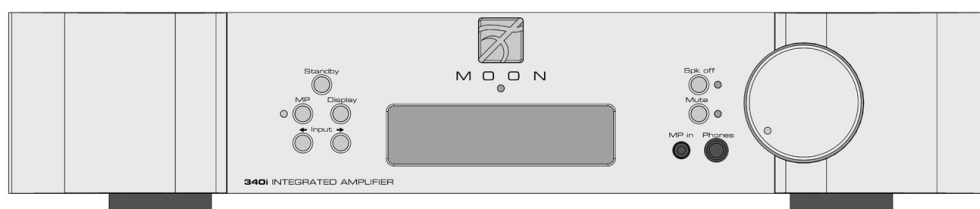

The front panel will look similar to Figure 1 (above). The large display window indicates the selected input source. If your **MOON 340i** includes the digital input option, additional information will appear in the display window. Refer to the section entitled "Optional Digital Inputs" on page 9 for further details.

The "Standby" button disengages the input section from the rest of the **340i's** circuitry. When in "Standby" mode all audio circuitry remains powered up to help maintain optimal performance. When switching back from "Standby" to the "on" mode, the blue LED directly above the display window will illuminate. As well, the current 'input' will be memorized from the previous listening session. The blue indicator LED turns off when the **340i** is in "Standby" mode.

The "MP" button (for Media Player) has its corresponding input connection located on the right side of the front panel for easy access. It uses a 1/8" mini-jack connector which is the most common type of connection found on portable media players. When selected, the corresponding red LED, located to the left of the button, will illuminate. When the "MP" input is in use the display window automatically turns off. The "Display" button allows you to turn the digital display on and off.

The two (2) buttons labeled ◀ **INPUT** ▶ allow you to sequentially scroll, either forward (▶) or backward (◀) through all of the available inputs. Depending on the installed options, the order of the inputs is as follows going forward (▶): Basic Unit: "CD", "A1", "A2" and "A3"; With all options installed: "CD", "A1", "A2", "PH", "B1", "D1", "D2", "D3" and "D4".

These abbreviations correspond directly to the labeling of the rear panel inputs. By default the "CD" input is intended for use with a CD Player, however you can connect another type of source component to it. "A1", "A2" and "A3" are intended for use with any type of source component that outputs analog signal. If you have installed the optional phono section, the "A3" input is replaced by "PH". If you have installed the balanced input option, "B1" will appear after the "A3" / "PH" input. Finally, if you have installed the digital input option, "D1", "D2", "D3" and "D4" will appear after either "B1" (if you have the balanced option) or "A3" / "PH". The optional inputs only appear if they are installed.

The "Spk off" button turns off the output signal **only** to the loudspeakers connected to the **MOON 340i**. This feature is very useful when using headphones. When this function is engaged, the red LED located to the right will illuminate.

The "Mute" button mutes the output signal to the loudspeaker terminals, headphone jack, as well as both the fixed and variable line output connectors (refer to the section entitled "Rear Panel Connections" for further details). Pressing the "Mute" button a second time will reinstate the volume back to its previous level. When the output signal is muted, the red LED to the right will repeatedly flash on and off.

## MOON by Simaudio

The "A2" input can be configured as a **"pass-through"** which bypasses the **340i**'s gain control section, allowing you to control the gain setting via the connected source component's own volume control – a home theater processor for example; In other words, this input operates like the input of a power amplifier. In **"pass-through" mode**, adjusting the volume on the **340i** will have no effect whatsoever when the "A2" input is selected. To put the "A2" input into **"pass-through" mode**, press and hold down the "Mute" button for approximately 2 seconds while on the "A2" input. The front panel display will change from "A2" to "HT". To reconfigure the "A2" input to function like the other inputs, repeat the this procedure. Powering down


the **340i** via the rear panel rocker switch will automatically reset the the "A2" to the factory default 'normal' mode.

The rotary "Volume" control determines the output level. The volume control has an embedded red LED to indicate its actual position.

The "Phones" jack is used for connecting a pair of stereo headphones to the **MOON 340i**. The input connector is a standard ¼" stereo TRS jack. When a pair of headphones are used with the **340i**, the loudspeakers will still receive an output signal. However, you should use the aforementioned "Spk off" button for private listening.



 Figure 2: MOON 340i Optional Digital Inputs – connection examples

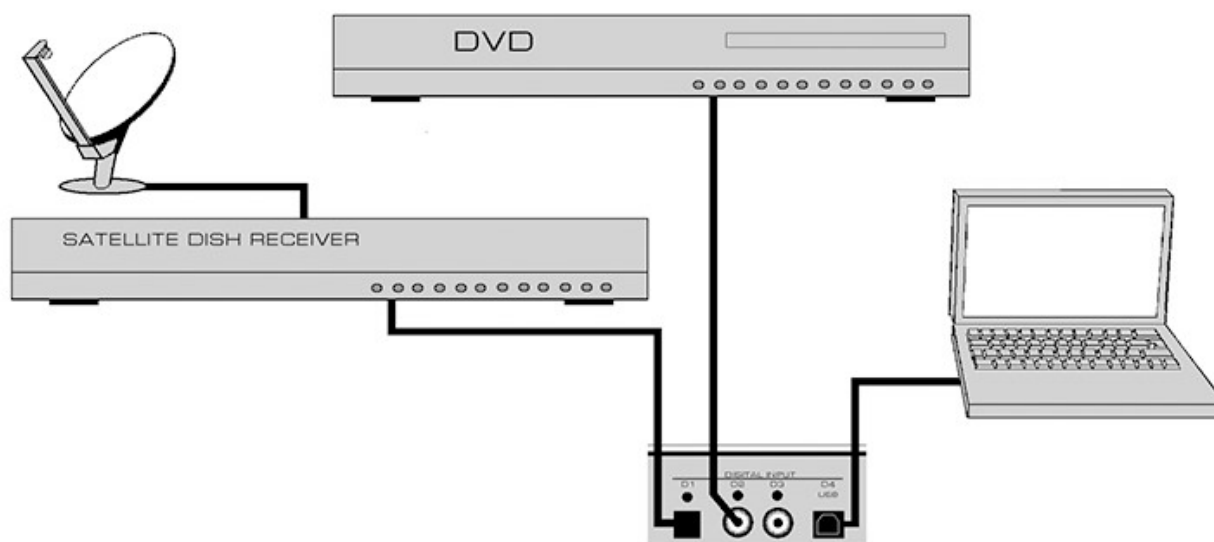

## Optional Digital Inputs

The Digital Input option includes four (4) separate inputs: "D1" uses an optical Toslink connector, "D2" and "D3" use S/PDIF on an female RCA connector and "D4" uses a type-B USB connector. The "D1" is intended for use with a source equipped with a TosLink digital output such as a satellite dish receiver; The "D2" and "D3" inputs are intended for use with a source equipped with a S/PDIF digital output such as a DVD player, music server or disc transport. The "D4" input is for use with a computer equipped with a USB connector and music player software such as iTunes or Winamp; **You cannot connect a USB flash drive or external hard drive to the "D4" input.**

When you select one of the digital inputs as described in the aforementioned section, the display window will show which of the four digital inputs is selected. At the same time, the right side of the display window will initially show four dashes as follows "----" which indicate that the **340i** is in the process of locking onto the external digital signal – this may take several seconds. When the **340i** successfully locks onto the digital signal, the four dashes will be replaced by the sampling rate of this digital signal. When the signal cannot be locked onto, "----" remains in the display window.

# Optional Phono Section

The **MOON 340i** Integrated Amplifier features an optional MC/MM phono section that may be installed only by your MOON Authorized Dealer or at the Simaudio factory. This phono card is a very high quality design, providing adjustments for both capacitance and resistance loading, as well as gain level. This flexibility allows you to optimize the **MOON 340i** for a wide variety of MC and MM cartridges.

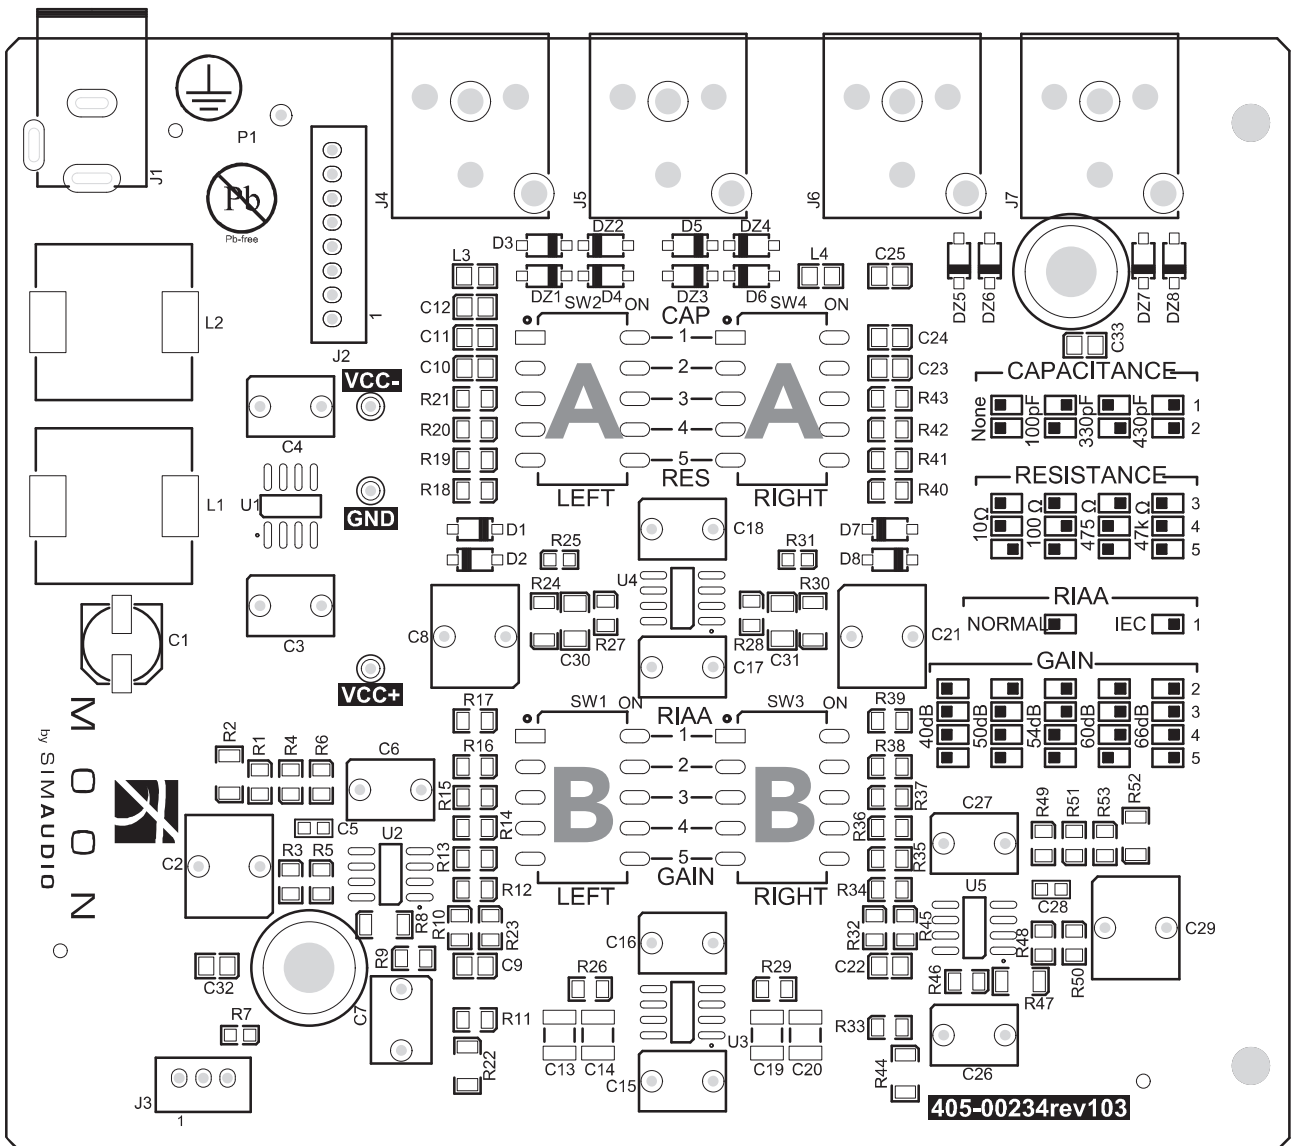 


Figure 3 : MOON 340i Optional Phono Section Circuit Board Layout

Figure 4 : Dipswitch A - Capacitance et résistance


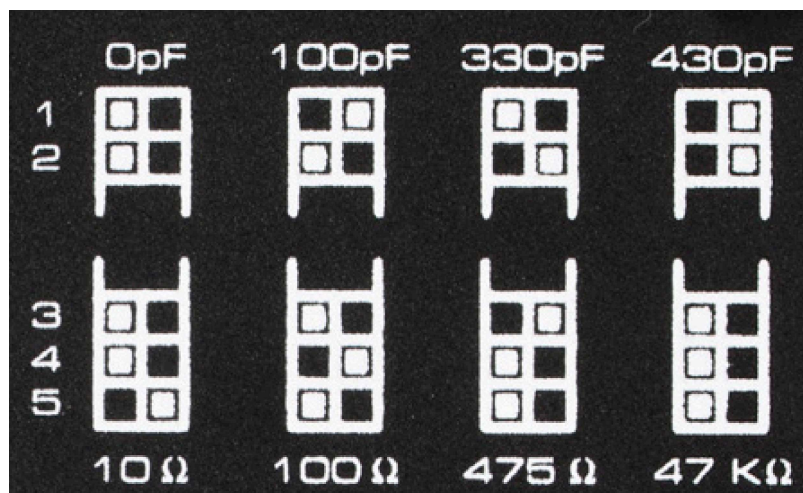 


Figure 5 : Dipswitch B - EQ and gain

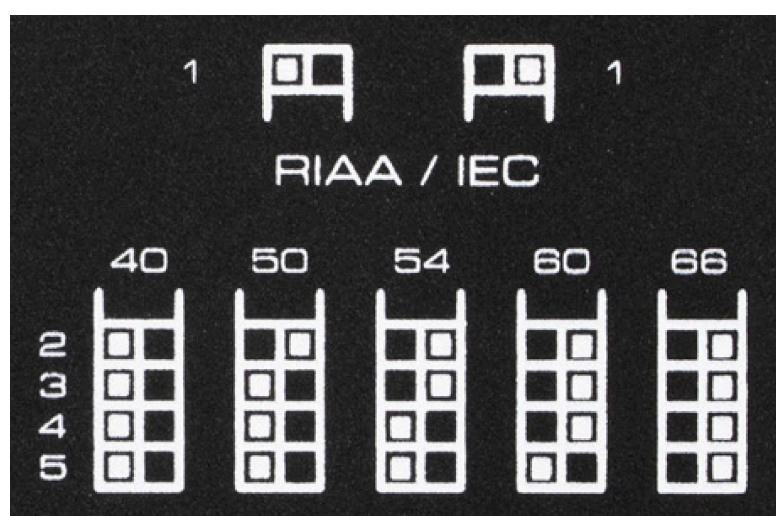 


Always power off the unit (by unplugging the power supply) before making any change of input settings.

Multiple combinations of settings can be applied to optimize the input for the cartridge. Ideally have the recommended settings from the cartridge manufacturer on hand as a starting point before any experimentation. And then you may experiment around the recommended values for best sound.

To adjust each parameters, set the dipswitches in A sections following indications from figure 4 and the dipswitches in B sections following indications from figure 5.

## Rear Panel Connections

 Figure 6 : MOON 340i Rear panel

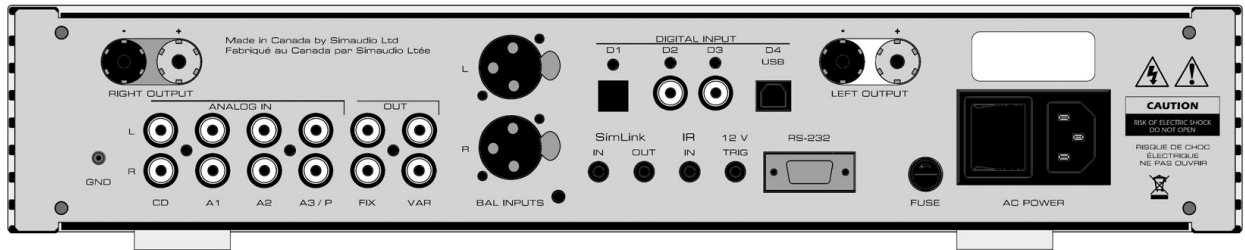

The rear panel will look similar to Figure 2 (above). There are four (4) pairs of single-ended analog inputs on RCA connectors labeled CD, A1, A2 and A3/P. The RCA input and output connectors on the rear panel have been color coded: 'white' for the left channel and 'red' for the right channel. If your **MOON 340i** is equipped with the optional phono section, the input labeled 'A3/P' must be used to connect your turntable interconnect leads to this integrated amplifier. If you don't have the optional phono section installed, then this input can be used in the same way as the CD, A1 and A2 inputs.

The **MOON 340i** integrated amplifier also has two pairs of non-amplified outputs labeled "FIX" and "VAR", located next to the A3/P input. The 'FIX' output is intended as an input to a recording device such as a cassette tape deck or CD-Recorder Player. Keep in mind that the output level is fixed and cannot be adjusted by the **340i's** volume control. The 'VAR' output is designated for output to a power amplifier with single-ended RCA inputs if you wish to use your **MOON 340i** only as a preamplifier. Keep in mind that the output level is variable and adjusted by the **340i's** volume control.

You will find one pair of XLR balanced inputs to the right of these non-amplified outputs. These are intended to be used with a source component that outputs a balanced signal.

For **MOON 340i's** equipped with the digital input option, you will find 4 digital inputs labeled D1, D2, D3 and D4. The D1 input is on an optical Toslink connector; both the D2 and D3 inputs are on a S/PDIF connector; the D4 input is on a USB type B connector

Below the area reserved for the optional digital inputs are a series of input/output connectors for custom type installations: From left to right there are two (2) "SimLink™" connectors labeled "in" and "out" on 1/8" mini jacks. Please refer to the next section entitled SimLink™ for more details. Next, there's a 1/8" mini-jack input for use with aftermarket infrared remote control receivers. Then there's a 12V trigger output on a 1/8" mini-jack that can power up a connected component (with a 12V trigger input) at the same time that the **340i** is powered up. Next, there's a full-function bi-directional RS-232 port for custom integration or automation on a DB9 connector. Finally on the far right side is the "AC Fuse" socket cover, the main power switch ("0"=off, "1"=on) and the IEC receptacle, labeled "AC Power" for the included AC power cord.

Don't hesitate to use high quality interconnect cables\*. Poor quality interconnect cables can degrade the overall sonic performance of your system.

The **MOON 340i** is equipped with a pair of gold-plated binding posts. Connect your speakers, with the cables of your choice, to the **340i's** speaker binding posts. Take care to respect the polarity ("+" , "-" ) of the outputs. Once again, don't hesitate to use high quality speaker cables\*. Poor quality speaker cables can degrade the overall sonic performance of your system.

Connect the supplied AC power cable to the IEC receptacle, located on the amplifier's rear panel. Ensure that the AC wall outlet you use

has a functioning ground. For the best sonic performance, it is preferable that you plug your **340i** directly into a dedicated AC outlet and avoid using an extension cord. If you have the time and willingness, consider installing a superior quality AC wall outlet such as a hospital grade Hubbell\*.

\* Please speak with your MOON Authorized Retailer about the benefits of high quality cables for your system, and superior quality AC wall outlet.

## SimLink™

The SimLink™ provides communication features between various **MOON** components. For example, if you were to connect the **260D** to the **340i** via the SimLink™, pressing the ► (play) button on the **260D** will cause the **340i** to automatically switch to the input labelled 'B1'. You can change this default setting as follows: Select the input that you want as the new default for CD, then press and hold the ◀ **INPUT** (left) button until the front panel display begins to flash on and off.

A second feature of SimLink™ involves the "Standby" function. By pressing down and holding the "Standby" button for 2 seconds on the either the **260D** or **340i**, both units will go into "Standby" mode. The same logic applies when switching from "Standby" to active mode.

If you are using the "MiND" Music Streamer and an external digital-to-analog converter (DAC), you must make a SimLink™ connection between the "MiND"s SimLink™ out and the **340i's** SimLink™ in. The "A1" input is the default input for the "MiND" Music Streamer; When you press the ► (play) button on the "MiND" App, the **340i** will automatically switch to the input labeled "A1". You can change this default settings for the "MiND" as follows: Select the input that you want as the new default for "MiND", then press and hold the "MP" button until the front panel display begins to flash on and off.

If your **340i** includes the "DAC" option, then the default input for the MiND is the 'D2" input; When you press the ► (play) button on the "MiND" App, the **340i** will automatically switch to the input labeled 'D2'. You can change these default settings for the "MiND" as follows: Select the input that you want as the new default for "MiND", then press and hold the "MP" button until the front panel display begins to flash on and off.

The connection rules for the SimLink™ are very basic. You must always connect the supplied cable between one component's SimLink™ Out jack and another component's SimLink™ In jack. If you inadvertently connect the cable between either two SimLink™ In or two SimLink™ Out jacks, the SimLink™ communication feature may not function. Also, there is no master component in a SimLink™ chain; no one particular component operates as the main communications controller.

## Operating the MOON 340i

We recommend leaving your **MOON 340i** powered up at all times to maintain optimal performance. When you plan on being away for a few days, it may not be a bad idea to power off your amplifier. Please keep in mind that once fully "broken-in", your **340i** requires several hours of operation before reaching optimal performance after powering it up again.

### Turning on your MOON 340i for the first time.

Prior to turning the amplifier on for the first time, make sure that every cable is properly connected to avoid any problems. Flick the main rocker switch, located on the rear panel, labeled "POWER" to the "1" (on) position. The blue LED on the front panel will blink for up to 10 seconds while it achieves standby mode. When it stops

blinking and is not illuminated, your **340i** is in standby mode. Next, briefly press the push button labeled "Standby" located on the front panel. You will hear a very faint click sound confirming that everything is in order. The blue LED on the front panel will illuminate, indicating that the **340i** is now powered up and ready for use.

### On and Off Sequence.

To avoid having any annoying noises (ie. "thumps" and "pops") emanate from your speakers when powering your **340i** on or off, you should always power up any source components prior to powering up your **340i**. As well, always power down your **340i** prior to powering down any source components.





## Remote Control Operation

The **MOON 340i** Integrated Amplifier uses the **CRM-3** full-function remote control (figure 7). It operates on the Philips RC-5 communication protocol and can be used with other Simaudio MOON components.

The **CRM-3** remote uses two CR-2032 batteries (included). To install them, simply remove the two screws from the slidible lower section of the back plate, insert the batteries in the correct direction and then replace the back plate.

To engage the **CRM-3** remote for use with the **MOON 340i** Integrated Amplifier, you must first press the button labeled **AMP**.

The "⏻" (Power) button, located on the upper left, will switch the integrated amplifier to either 'Standby' or 'On' mode.

The **DISPLAY** button turns the front panel display on and off.

The 2 buttons labelled **← INPUT →** allow you to sequentially scroll, either backwards or forwards, through all six (6) available inputs. For example, to switch from the "CD" to the "VIDEO" input you may press either **← INPUT** three (3) times or **INPUT →** three (3) times. Pressing and holding down either of these buttons results in only a single change to the selected input.

The 2 buttons labelled **- VOL +** allow you to control the volume level. Pressing **VOL -** results in a decrease in the volume level; Pressing **VOL +** results in an increase in the volume level. You may either press and hold these buttons down or press them briefly to make volume adjustments.

The **MUTE** button turns off the output volume. Pressing the "Mute" button a second time will reinstate the output volume level back to its current setting.

NOTE: The buttons labelled **← BAL →** don't affect the operation of the **340i**.

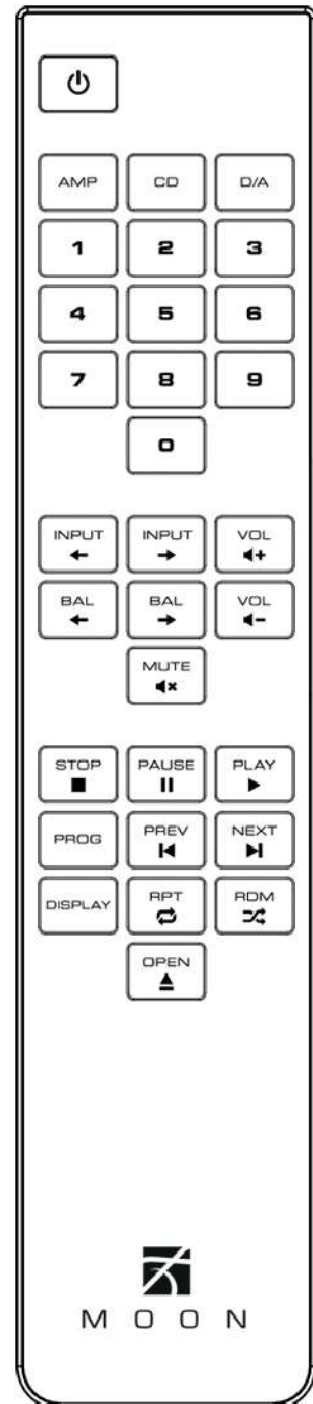 


Figure 7 : CRM-3 Remote Control

## Remote operation with multiple MOON components



Figure 8 : Remote Operation with SimLink™

In figure 6 we have a 180 MiND Music Streamer and a **MOON 340i** Integrated Amplifier connected together via their respective SimLink™ ports. The SimLink™ output on the 180 MiND is connected to the SimLink™ input on the **340i** (using a 1/8" mini-jack cable). When you launch the MiND App on your smart device and select this system's ZONE, both the 180 MiND and the **340i** will turn on, with the **340i** automatically switching to the MiND assigned input, as described previously in the SimLink™ section. To shut down the system, press "Off" for this ZONE in the MiND app.



Figure 9 : Remote Operation with 12V Trigger

In figure 7 we have a **MOON 340i** Integrated Amplifier (used either as ONLY a preamplifier or in a bi-amping configuration) and 330A Amplifier connected together via their respective 12V triggers; The 12V trigger output on the **340i** is connected to the 12V trigger input on the 330A (using a 1/8" mini-jack cable). When you turn on the **340i** via remote control (or its Standby button), the 330A will also turn on. The same rule applies when you put the **340i** into Standby mode.

## Specifications

Configuration	Stereo
Power Supply Transformer	400VA
Power Supply Capacitance	40,000 $\mu$ F
Class Of Operation – Amplifier	Class A/B
Single-ended inputs	4 (RCA)
Mini-jack input	1 (1/8")
Balanced inputs	1 (XLR)
Input Sensitivity	370mV – 3.0V RMS
Input Impedance	11,000 $\Omega$
Preamplifier output	1 (RCA)
Headphone output	1 (1/4" Stereo TRS)
Output Power @ 8 $\Omega$	100 Watts per channel
Output Power @ 4 $\Omega$	200 Watts per channel
Gain	37dB
Signal-to-noise Ratio	110 dB @ full power
Frequency Response	2Hz - 90kHz +0/-3.0dB
Crosstalk@ 1kHz	-88dB
Intermodulation Distortion	0.03%
THD (20Hz — 20kHz @ 1 watt)	0.015%
THD (20Hz — 20kHz @ 100 watts)	0.05%
Remote Control	CRM-3
AC Power Requirements	120V / 60Hz ou 240V / 50Hz
Shipping Weight	28 lb / 13 kg
Dimensions (W x H x D, inches / cm)	16.9 x 3.5 x 14.8 / 42.9 x 8.9 x 37.6



Fuse Replacement:

**120V version uses a 5A fast blow (3AG)**  
**230V version uses a 3A fast blow (3AG)**

### Optional Phono Section

Input Impedance - Adjustable	10 $\Omega$ , 100 $\Omega$ , 475 $\Omega$ and 47 k $\Omega$
Input Capacitance - Adjustable	0pF, 100pF, 330pF and 430pF
Gain - Adjustable	40dB, 50dB, 54dB, 60dB and 66dB
Frequency Response	20Hz - 20kHz ( $\pm$ 0.5dB)
Crosstalk @ 1kHz	-97dB
IMD	0.009%
THD (20Hz - 20kHz)	0.001%

### Optional Digital-to-Analog Converter

Digital Input Types	S/PDIF (RCA) x2 USB x1 TosLink x1
Digital Input Impedance (S/PDIF)	75 ohms @ 0.5 Volts
DAC / Digital Filter	ESS9018K2M
DSD Data Rates	(2.8224MHz), Double (5.6448MHz) & Quadruple (11.2896)
DSD Sample Rates	DSD 64, DSD 128 & DSD256 (via USB only)
PCM Bit-depth range	16 - 32 bits (32-bits via USB only)
PCM Sampling Frequency Rates	44.1 - 384kHz (352.8 & 384kHz via USB only)
Frequency Response (audible)	20Hz - 20kHz +0/-0.2dB
Frequency Response (full range)	2Hz - 72kHz +0/-3dB
THD @ 1kHz, 0dBFS (A-weighted)	0.001 %
IMD	0.004 %
Dynamic Range	116dB
Signal-to-noise Ratio	115 dB @ full output
Channel Separation	115dB
Intrinsic Jitter	< 25 picoseconds RMS

### Balanced Pin Assignment

Pin 1	Ground
Pin 2	Positive
Pin 3	Negative

If you require the RS-232 codes for your MOON 340i X, please visit the "Contact Us" page and complete the "Information request" form on our website at [www.simaudio.com](http://www.simaudio.com).

Simaudio Ltd.  
1345 Newton Rd.  
Boucherville,  
Quebec, J4B 5H2  
CANADA  
T. 450 449-2212

M O O N  
by SIMAUDIO